 


VEES PREMIUM

RANGE HOOD

INSTRUCTION MANUAL

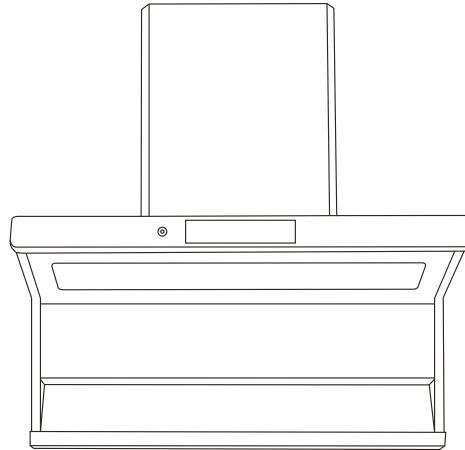

VCH-KLARA-90BK

Maintenance

Frequent maintenance should be done regularly to ensure longer life span of the cooker hood. Please pull out the plug while cleaning for safety purposes.

1.Keep the exterior of the cooker hood clean. Please Wipe the exterior often with dry cloth and neutral detergent to keep it tidy and clean.

2.The oil filter will accumulate oil stain and grime over time. Please clean it once every five days depending on usage, or replace it with a new one.

3.Remove the waste oil away in the exterior oil cup. Clean it and fix it back

Warning/Caution

-This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

-Children should be supervised not to play with the appliance.



Touchcontrol

- ☐ Touch "Turbo" button, to turn on the highest speed
- ☐ Touch "+" button, to increase the speed of the Cooker hood.
- ☐ Touch "-" button, to decrease the speed of the Cooker hood.
- ☐ Touch the "Light" button. the lights will ON. Repeat this action. the lights will turn off.
- ☐ Touch the "Clean" button for 3 seconds. The auto heat clean function will start. The Symbol will lit and 10 minutes countdown. Heating Film work will for 9 minutes. After that, fans will work for 1 minute, when auto clean is done. It will Switch off automatically. Press this button or press the on/off to cancel the auto clean function.
- ☐ Touch "Power" button, to turn on or turn off the Cooker hood.
- ☐ Touch "Delay" button, will turn off after 1 minute.
- ☐ Touch the "Set" button for 3 seconds. To set the time, then touch "+" button, to increase the time, then touch "-" button, to decrease the time.

Gesturecontrol

Press "Power" and hold for 3 seconds in off mode. it could turn on or off the gesture control. Put your hand up in front of the sensor area, reasonable distance is 50mm, then start to control cooker hood by hand gesture.

Wave hand from left to right. fans will start from Level 5 speed. The working light will also be turned ON. Wave hand from left to right again it will increase the speed.

Wave hand from right to left, fans will be off delay, if wave again will shut down.

Technical Specifications

Model NO.	VCH-KLARA-90BK		
Power Input:	AC 220~240V	Motor Power:	230W
Frequency:	50/60Hz	Heat Clean:	113W
Suction:	2500m³/h	Light:	≤ 9W
Noise	≤ 75dB(A)	Flue Outlet:	Φ 185mm


INSTALLATION GUIDE

The installation work must be undertaken by a qualified and competent person in conformity to the rules concerning evacuation of contaminated air. Please confirm the right rated power input connected.

Prepare Tools;

1. Impact borer Φ 8mm aiguilles
2. Spanner
3. Screwdriver with “+”
4. Ruler
5. Hammer

SECOND CHIMNEY INSTALLATION

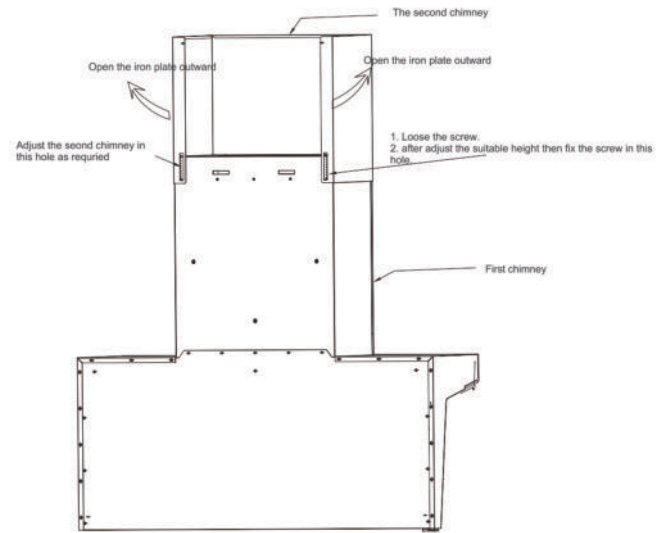

Confirm Position

A $\Phi 190$ through-hole on the wall, angled downward at 20 degrees.

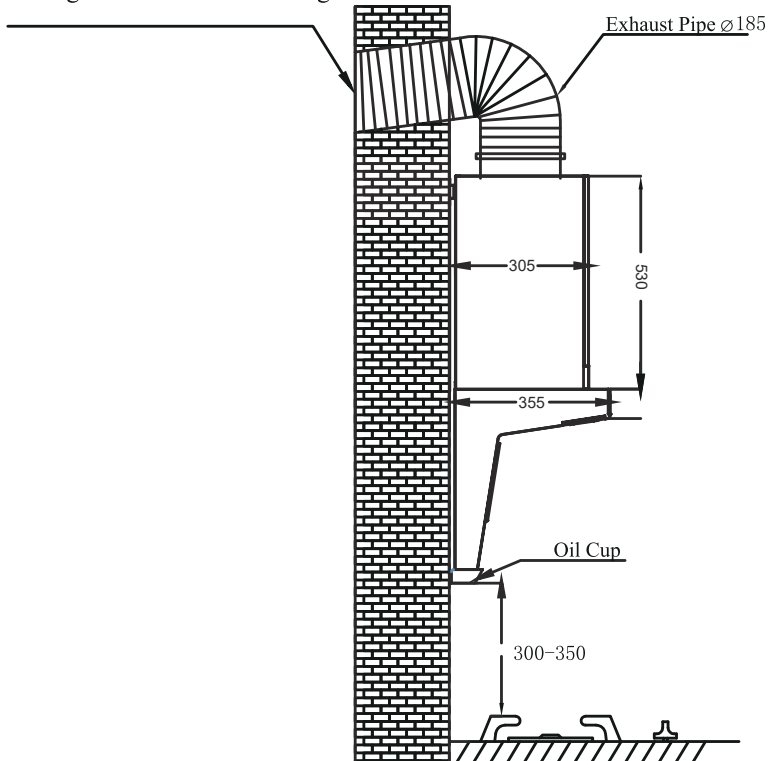


Figure 1

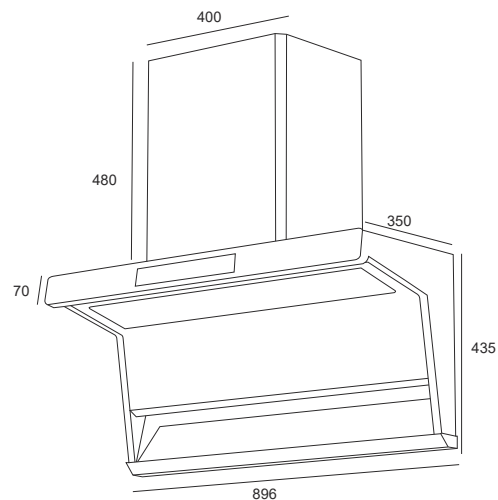


Figure 2

ATTENTION:

1. Please ask the technical person to assemble or release.
2. Keep motor and other spare parts out of water or it leads damage
3. Please confirm that the power is cut off before clean it.
4. Take care of the plug and wire away from water or oil
5. The filter mesh can not be put into the fire.
6. Take care for your hands crash by metal of oil net when cleaning.
7. The working condition of cooker hood must good ventilation when cooking.
8. The cooker hood is for home use only.
9. Never let the children operate the machine.

DAILY MAINTAINENCE

- A. It must maintain usually.
- B. Take care for your hands crash by metal of oil net when cleaning.
- C. Water into motor and electric parts are forbidden.
- D. Pull out the plug when you maintain it.
- E. The stove roasts cooker hood and gas burn only are forbidden.
- F. Move the oil cup and drop the dirty when the oil is about 80 percent.
Please use soft material with neutral cleanser to clean it, the organise liquor is forbidden, such as acidum, gasolene etc

Attention:

It must pull out the plug from outlet and confirm cut off power during disassemble the product.

ATTENTION

This warranty does not cover the followings:

1. Personal reason make the glass or Stainless steel broken.
2. Improper installation, misuse, abuse or neglect.
3. Improper lead to insufficient, unsuitable power .
4. Damage cause by external object.
5. Taken apart or serviced by unauthorized service station; or replace with different manufacture components.
6. Out of free warranty time.