 


vees signature

RANGE HOOD

INSTRUCTION MANUAL

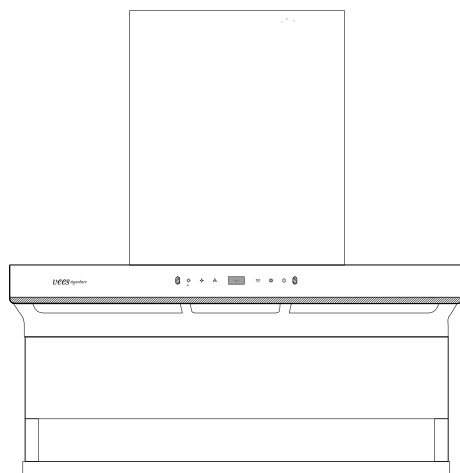

 
VCH-TENDO-90BL

Maintenance

Frequent maintenance should be done regularly to ensure longer life span of the cooker hood. Please pull out the plug while cleaning for safety purposes.

- 1.Keep the exterior of the cooker hood clean. Please wipe the exterior often with dry cloth and neutral detergent to keep it tidy and clean.
- 2.The oil filter will accumulate oil stain and grime over time. Please clean it once every five days depending on usage, or replace it with a new one.
- 3.Remove the waste oil away in the exterior oil cup. Clean it and fix it back.

Autoclean Touch Control Operation



TOUCH CONTROL:

- Touch “” button, All the buttons light will Switch ON and the cooker hood is now in stand-by mode.
- Touch “” button, to increase the speed of the Cooker hood.
- Touch “” button, to decrease the speed of the Cooker hood.
- Touch the “” button, the lights will ON. Repeat this action, the lights will turn off.
- Touch the “” button for 3 seconds. The heat auto clean function will start. The symbol “” will lit and 11 minutes countdown. Heating Film work will for 10 minutes. After that, fans will work for 1 minute. when auto clean is done .It will Switch off automatically. Press this button or press the “” to cancel the auto clean function.
- Touch “” button. Fans will work at the highest speed: i.e the symbol “” will lit and the display will show F9. After 3 minutes, it will run at 8th speed, the display will show F8.

GESTURE CONTROL:

Gesture control is the ability to recognize and interpret movement of the human body in order to interact with and control a PCB system without direct physical contact. This can avoid poor touch caused by oil/grease on the hand.

Press “” and hold for 3 seconds in off mode, it could turn on or off the gesture control.

when the gesture function is ON, the display will show “on” and also the symbol of “” will be lightened. If not, display will show off and the symbol will also turn OFF. Put your hand up in front of the sensor area, reasonable distance is 50mm, then start to control cooker hood by hand gesture. Wave hand from left to right, fans will start from 1st speed (display shows F1). The working light will also be turned ON. Wave hand from left to right again, it will enter 2nd (F2) speed. Repeat again, it will enter 3rd (display shows F3) speed and then 4th (display shows F4) speed, 5th (display shows F5) speed, 6th (display shows F6) speed, 7th (display shows F7) speed, 8th (display shows F8) speed, 1st (display shows F1) speed in circulation.

DELAY:

A unique “Delay” shut-off function has been provided in this cooker hood. Once the cooking is over, instead of switching off the appliances, touch the “” button. A reverse timer of 3

minute will get activated and the cooker hood will shut itself off after the end of 3 minutes.

If the power button "" is pressed again, the cooker hood will be turned off at once.

TIME SET:

When off mode,

Press "" button and hold 3 seconds enter time set, the display hour area will start blinking .

Press or long Press "" or "" to select the time .

Press "" button, hour area set is done. And the minute area gets blinking, also press or long press "" or "" to select the time.

Press "" button, time set is done.

Disclaimer

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised not to play with the appliance.

Installation method

1.Installation location:

Install the kitchen hood horizontally above the stove. The bottom of the cooker hood is about 650-750mm above the stove. The size of the drawable boards we refer to you is 430mm, which can be adjusted according to actual situation. The open holes must be vertical, centre and horizontal to the cooker hood.

2.Installing the bracket:

Firstly, bore three holes on the wall with a diameter of 8mm and 50-60mm depth. Then put the expansion tube in the packing box to set the bracket.

3.Removing the stretched tube (If there is):

Remove the stretched tube, place cooker hood on wall and adjust to appropriate height.

4.Installing the cooker hood (FIG-1):

Press and slide the pothook on the cladding into the holes at the back of the cooker hood. Make sure it is placed tight without any loose movements.


5.Fixing the exhaust pipe:

Insert the exhaust pipe between the inside and outside track of the air outlet. Fix it with ST3x6 Bolts, and place the other end facing outdoor.

6.Fixing the exit end of the exhaust pipe:

a.Window: Remove panel of glass and fix a veneer with a hole, or make a hole on the glass

b.Bore a hole in the wall: Measure and draw a circle on the wall with the diameter slightly bigger than that of the exhaust pipe. The diameter of the hole should be close to the diameter of the exhaust pipe so the air can go out smoothly with less noise.

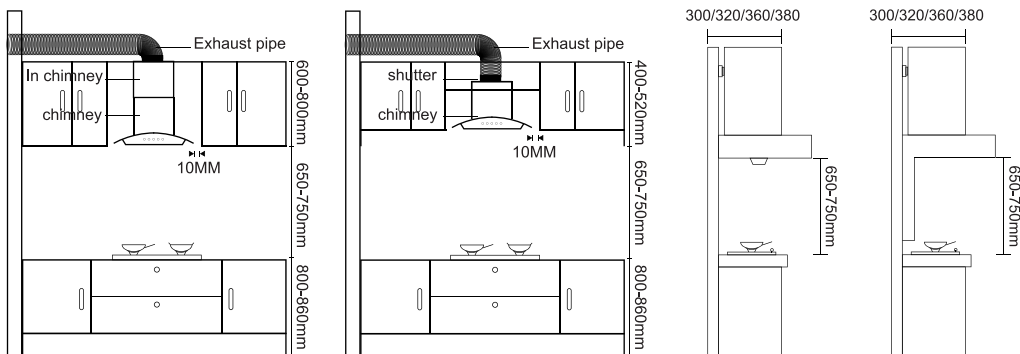

Directions of use

1.Clean the panel frequently with soft cloth and neutral detergent. Clean the oil filter atleast once a month and oil stain and grime often on other parts of the cooker hood.

Attention: Pull out the plug before cleaning. Avoid flammable solvent such as alcohol, amyl acetate, gasoline to clean the cooker hood.

2.The exhaust air by the cooker hood should be away from hot fluid or gas used in cooking

3.Do not have the fire from the gas stove to have direct contact with the hood to avoid burning the oil cup, lamp panel and other electrical apparatus to be burnt.

4.Credible earth lead sockets must be used.

5.If any wiring is broken. Please contact the manufacturer or authorised service agents to purchase the right wire or to fix the wiring.

6.If the socket is not earth lead, have them earth connected or the hood cannot be used.

7.Please clean and have regular maintenance of the cooker hood for optimal performance.

If there is a need to change the light bulbs, please follow the appropriate rated power for the cooker hood model.

Malfunctions and solutions

Fault	Cause	Solution
Buttons doesn't work.	The plug is not inserted or power cut.	Reconnect plug or contact an authorised service personnel only.
Light on, but fan does not work.	Fan is jammed.	Switch off and contact an authorised service personnel only.
	Motor is damaged.	
Light and fan do not work.	Light bulb burnt.	Replace light bulb.
	Power cord loose.	Plug in to power supply again.
Serious vibration of hood.	Fan blade is damaged.	Switch off and contact an authorised service personnel only.
	Fan motor is not fixed tightly.	Switch off and contact an authorised service personnel only.
	Hood is not hung properly.	Take down the hood and check if the bracket is installed properly.

Service Centre:

F-06-03, Setiawalk, Pusat Bandar Puchong, 47160 Puchong, Selangor, Malaysia.

Service Hotline: 03-8600 1648