


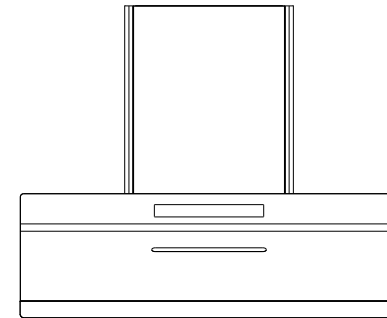

Service Centre:

F-06-03, Setiawalk, Pusat Bandar Puchong,
47160 Puchong, Selangor, Malaysia.
SERVICE Hotline : 03-8600 1648

vees signature

Product model: VSCH-STELLA-90GY

WARNING / CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised not to play with the appliance.

Table of contents

Product Safety Precautions	01~02
Product diagram	03
Electrical schematics	03
Installation Instructions	04
Instructions for use	06
Functional Description	07
Cleaning and Maintenance	08
Troubleshooting	09
Specifications	10

Product Safety Precautions

Safety Tips


In order to avoid causing harm to users and other people and property damage, please read the following important safety matters carefully, strictly abide by them, and use them correctly after fully understanding the contents. Before use, please read this instruction manual carefully and use it strictly in accordance with the instructions. Our company does not assume any legal responsibility for any personal injury or property damage caused by improper use of this product.

Logo Explanation

	Do not operate		Must strictly follow the requirements		Parts that must be paid attention to
Prohibition signs		Warning signs		Attention Signs	


 Prohibit	Non-professionals are not allowed to disassemble, install or repair the slim kitchen hood. Non-professional maintenance personnel are strictly prohibited from making unauthorized changes to the internal wiring of the slim kitchen hood. Please do not touch the power plug, electrical components or operate the power switch with wet hands, otherwise electric shock may occur. The fire should be extinguished in time when not in use. It is prohibited to allow the fire to directly heat the slim kitchen hood, which may cause it to be heated and dangerous. Please do not allow unsupervised children or weak people to use the slim kitchen hood alone, otherwise it may cause electric shock or other accidental injuries. Please do not modify, stretch, knot, apply heavy objects or squeeze the power cord, otherwise it may cause damage to the power cord and cause electric shock or fire accidents. Do not allow electrical components such as motors, switches, and connectors to get wet. Do not rinse the slim kitchen hood with water. Do not use the slim kitchen hood after it has been soaked in water; doing so may result in electrical leakage, electric shock, and other accidents.
 Warning	Before cleaning, installing or repairing the slim kitchen hood, the power supply must be turned off to avoid electric shock. Slim kitchen hood exhaust should not be discharged into hot ducts used for venting fumes from burning gas or other fuels. When the slim kitchen hood is used simultaneously with appliances burning gas or other fuels, the room must be well ventilated. If the slim kitchen hood is not cleaned according to the instructions in the instruction manual, there is a risk of fire. Do not put your fingers or other objects into the moving parts of the slim kitchen hood to avoid injury. When an oil pan catches fire, please turn off the slim kitchen hood immediately and use effective fire extinguishing methods, such as covering the open flame with a metal lid, immediately closing the main gas valve, and keeping flammable materials away from the open flame.
 Notice	The slim kitchen hood should use a dedicated power socket, and the dedicated power socket should be reliably grounded. The film covering the exterior parts (such as decorative panels) is a protective film. Please carefully peel it off before use. This appliance is an external exhaust slim kitchen hood. The oil smoke is discharged to the outside through the smoke pipe. Please ensure that the exhaust duct is smooth to avoid affecting the smoke exhaust effect. The installation shall be carried out by professionals. After the installation is completed and the test run is completed, if there are no abnormal phenomena, the after-sales service personnel shall explain the usage to the user. Do not use AC power above 220 V to avoid danger.

Product Diagram

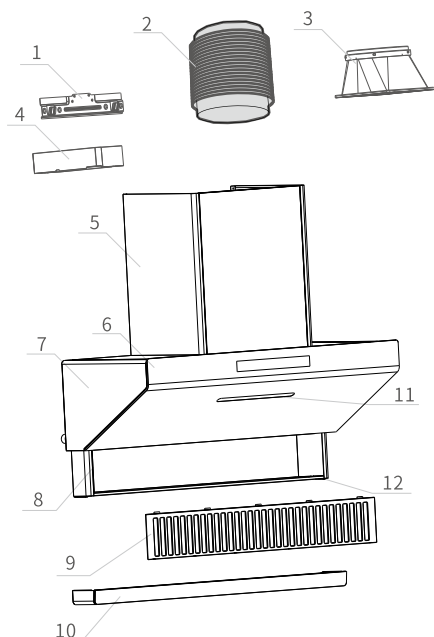

- | | |
|---|------------------------|
| 1 Hanging board | 9 Filter |
| 2 Smoke pipe | 10 oil cups |
| 3 Air outlet | 11 light |
| 4 Electrical box | 12 Oil cup hanging ear |
| 5 Chimmney | |
| 6 Switch glass panel | |
| 7 smoke collection chamber | |
| 8 Smoke cage board | |
| Slim kitchen hood schematic (for parts identification only) | |

Electrical schematics

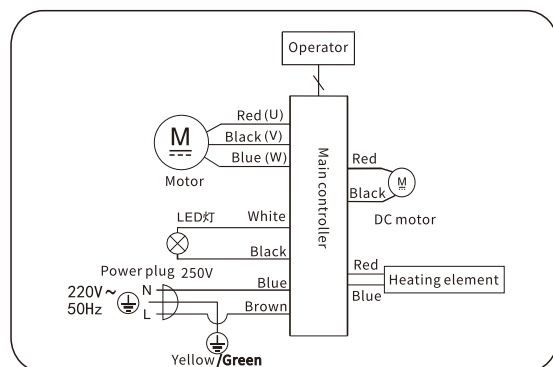

Installation Instructions

1.The following tools are required for slim kitchen hood installation: impact drill, impact drill bit, ruler, level, glass cutter, Phillips screwdriver, flat-blade screwdriver, herringbone screwdriver, hexagonal screwdriver, multimeter, voltage tester, needle-nose pliers, power supply tester (phase meter), adjustable wrench, utility knife, and glue gun.

2.Please refer to the packing list for details of accessories required for installing the slim kitchen hood.

3.The location where the slim kitchen hood is installed should meet the following conditions

- (1).The room where the slim kitchen hood is used should be well ventilated and free of flammable, explosive or corrosive materials or items;
- (2).The wall where the slim kitchen hood is installed should be strong enough and have a flat surface;
- (3).When drilling holes other than in the wall, avoid water, electricity, and gas pipelines buried in the wall to avoid dangers such as electric shock and gas leakage.

Installation steps

1. Install the fixings

- (1). Find the installation position of the hanging board on the wall as shown in Figure 1.

The position should be kept horizontal and not tilted left or right.

- (2). Use an impact drill bit with a diameter of 0.8 to drill a hole with a depth of 55 mm in the wall.

It is strictly forbidden to use a hole diameter that is too large when drilling to prevent the expansion tube from loosening and causing accidental falling.

- (3). Install the expansion tube into the wall hole and fasten the fixings to the wall with wood screws

2. Install a check valve

Place the check valve gasket and check valve components on the air outlet on the top of the main unit in sequence and tighten them with cross-slot flat pan head screws.

3. Fixed host

Hang the host on the host hanging plate on the wall. Make sure the host and the hanging plate are tightly fitted together without any looseness.

4. Fix the set screw

Press the set screws tightly against the top surface of the housing as shown in the figure, ensuring that the set screws are firmly engaged with the main unit without any looseness (see Figure 2).


5. Connect the universal air duct (to prevent oil smoke from flowing back, it is recommended to install a professional smoke detector)

- (1.)Insert one end of the universal air duct into the groove of the check valve seat and fix it on the check valve component;
- (2.)The other end of the universal air duct is directly connected to the public flue or the wall hole on the external wall, and the hole diameter is 0.180 mm. Note: The length of the universal air duct shall not exceed 3 meters, the number of elbows shall be less than 2, and the single bend shall be greater than or equal to 90 degrees, so as to avoid the air flow being squeezed in the pipe, affecting the exhaust effect and increasing the noise.

6. Install the oil cup

Hold the oil cup with your hand, align the oil cup claws with the snap-on position at the bottom of the machine body, and push it horizontally into place. (As shown in Figure 3)

Installation diagram

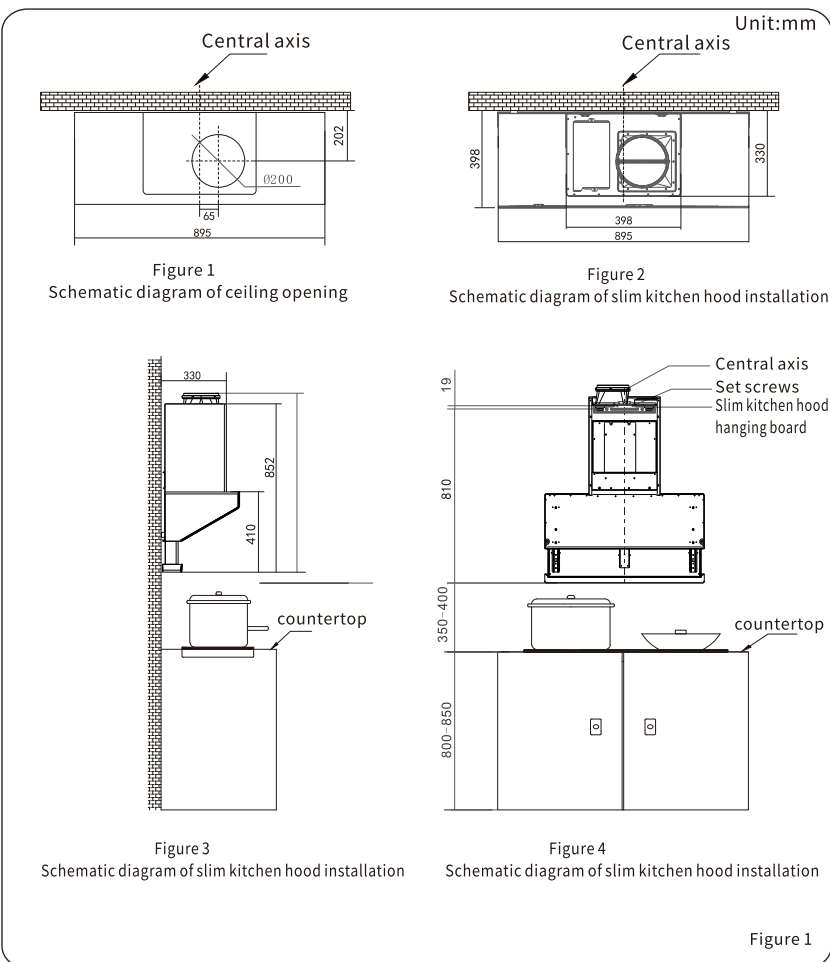

Instructions for use

If you do not clean the slim kitchen hood according to the instructions, there is a risk of fire.

When using a slim kitchen hood when the fire consumes gas or other fuel, the room must be well ventilated;

It is prohibited to use stove fire to directly bake the slim kitchen hood;

Use a power socket with reliable grounding;

This machine is a household appliance, avoid using it in special environments;

It is strictly forbidden to splash dirt on the surface, otherwise, permanent corrosion will occur;

When renovating a house, it is not advisable to expose the slim kitchen hood to the outside, because building materials, dust, paint, coatings, and their volatile gases will cause corrosion and loss of gloss on the surface. The slim kitchen hood should be hung after the renovation is completed.

Always clean the oil stains on the slim kitchen hood. When wiping the slim kitchen hood, be sure to unplug the power plug and wear rubber gloves to prevent the steel plate edges from scratching your fingers.


When cleaning, use a neutral detergent, and do not use detergents containing abrasives or flammable detergents. After cleaning, wash off the detergent with clean water and wipe dry.

It is strictly forbidden to flush with water to prevent water from entering the electrical components;

When cleaning, do not use sharp, hard objects, steel wool or other tools that may damage the surface;

The slim kitchen hood should be handled with care to avoid knocks, collisions, scratches and surface damage;

If the slim kitchen hood is installed above a gas stove, the minimum distance between the support surface of the cooking utensils on the stove and the lowest part of the slim kitchen hood should be 350 mm. If the installation instructions of the gas stove specify a larger installation distance, this should be taken into account.

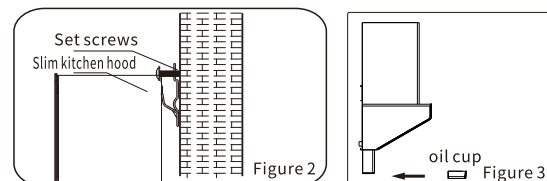

Functional Description

Key Description 		
Key	Function Definition	Function Description
	Switch	After powering on, the display will be fully displayed for 1 second, then enter the shutdown state, emit 4 chord sounds, display 12:00, all button lights will go out, and the gesture icon and the word "body feeling" will light up. The baffle will close. With the motor on, press the power button to activate the 3-minute delay shutdown function. The digital tube displays a countdown of 3:00. When the countdown ends, all functions will be shut down and the device will enter the shutdown state. During the delay period, switching gears will disable the delay function. During the delay period, pressing the power button again will directly disable all functions and enter the shutdown state.
	Function on and off	In the off state, press and hold the power button for about 3 seconds. If the gesture icon turns off, the gesture is turned off. In the off state, press and hold the power button for about 3 seconds. If the gesture icon lights up, the gesture function is enabled.
	Light	Short press the lighting button to switch the lighting function on and off Lighting off: Lighting key light (off when the machine is turned off, dimly lit when the machine is turned on), slim kitchen hood lighting is not output.
	Clean	While the device is powered on, press and hold the Wash button for approximately 3 seconds to automatically shut down the motor and begin the 11-minute wash cycle. The Wash button light will flash, and a countdown of will be displayed. The first 10 minutes of cleaning will be heated, with no motor output. The last minute of cleaning will be heated, with the motor rotating rapidly. At the end of the cleaning cycle, the device will enter the shutdown state, shutting down all outputs. During the cleaning process, all buttons except the Light, Wash, and Power buttons will be inoperative. You can exit the cleaning process by pressing and holding the Wash button or shut down the device by pressing the Power button.
	Speed	Press the wind speed button, the fan outputs at high speed (the default is high speed), and the wind speed button lights are all on; the middle two digits of the digital tube display the cubic number; operate again, the fan outputs at low speed, operate again to high speed, and the high speed to low-speed cycle.
	Turbo	Press the stir-fry button to activate the fan stir-fry mode, and the stir-fry mode light will flash. The middle two digits of the digital tube display the cubic meter. After three minutes of stir-frying without any operation, the machine automatically returns to high speed. Pressing the stir-fry button again during stir-frying will directly return to high speed.

	Auto	used for the power to change with the air duct resistance.
	Gesture function	In the off state, wave your hand from left to right, the slim kitchen hood will automatically turn on, slow down and light up; continue waving your hand from left to right:High speed -> stir-fry -> low speed -> high speed cycle. When the slim kitchen hood is on and the motor is running, wave your hand from right to left and the slim kitchen hood will enter the delay function; continue waving your hand and the slim kitchen hood will automatically shut down. (Gestures are invalid after the oil removal function is activated. Gestures are invalid during time adjustment.) (When the device is powered off, waving from right to left will not produce any action)
Time Adjustment		In standby mode (with no function turned on), long press the wash + stir-fry buttons to enter the time setting function: first set the hour, the hour digit will flash, and you can operate the high-speed key/+ key and low-speed key/- key to set it. After setting, press the stir-fry button to confirm and enter the minute setting. The minute digit will flash, and you can operate the high-peed key/+ key and low-speed key/- key to set it. After setting, press the stir-fry button or do nothing for 6 seconds to confirm and exit the time setting function.
Delay function		With the motor on, press the power button to activate the 3-minute delay shutdown function. The digital tube displays a countdown of 3:00. When the countdown ends, all functions will be shut down and the device will enter the shutdown state. During the delay period, switching gears will disable the delay function. During the delay period, pressing the power button again will directly disable all functions and enter the shutdown state.

Cleaning and maintenance

1. Cleaning and maintenance preparation
- ①Before cleaning or maintaining the range hood, be sure to unplug the power plug first;
- ② Please wear rubber gloves when cleaning or maintaining to prevent injuries from metal parts;
- ③Handle the disassembled parts with care during cleaning or maintenance to avoid deformation;
- ④ Please clean and maintain the slim kitchen hood regularly according to your frequency of use and the surrounding environment.
2. Clean the main body
- ①After using the slim kitchen hood every day, you should wipe the surface of the main body;
- ② To protect the surface coating of the machine, please use neutral detergent and soft cloth when cleaning and wiping. Do not use toothbrushes, laundry brushes, steel wool and other hard-bristled brushes;
- ③ Do not use toothpaste, scouring powder, laundry detergent and other abrasive cleaning products or corrosive liquids (acidic or alkaline) and corrosive chemical reagents such as gasoline and alcohol to wipe the surface of the slim kitchen hood;
- ④The glass plate can be scrubbed normally, but avoid direct flushing and soaking.

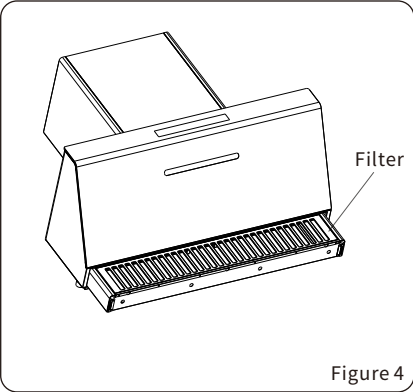


Figure 4

3. Clean the oil cup

Check regularly and clean it in time to prevent overflow; hold both ends of the bottom of the oil cup with both hands, pull the oil cup outward horizontally, remove the oil cup, and pour out the waste oil.

4. Clean the oil screen

As shown in Figure 4, use a Phillips screwdriver to remove the screws securing the oil screen, then lift the oil screen upwards to remove it for cleaning.

5. Clean the impeller (this is for professionals only, do not disassemble the machine for cleaning without permission)

To ensure the reliability and safety of the entire machine, the cleaning steps only include cleaning the oil screen. The cleaning of parts such as the impeller must be done by professionals.

6. Clean the whole machine

① Professional cleaning (impeller cleaning) is recommended once a year to maintain good smoking effect and long service life;

② If you do not use the slim kitchen hood for a long time, you should unplug the power plug.

Specifications

Product model	VSCH-STELLA-90GY
Rated voltage	220V-240V~
Rated frequency	50/60Hz
Max power	390W
Heater power	90W
Product dimension (length × width × height)	895x398x735(mm)
Packing dimension (length × width × height)	970x883x520(mm)

Troubleshooting



Notice

If an abnormality occurs, first follow the steps below to handle it
If the problem persists, please contact your local after-sales service center immediately.
Non-professionals are not allowed to disassemble or repair the product.

Fault phenomenon	Possible reasons	Treatment method
The lighting is not on	The lighting is damaged	Replace the light (please contact after-sales)
There is mechanical vibration and noise	- The host is not hung firmly - The screw is loose	- Make sure the host is hung securely - Check whether the screws on the surface of the slim kitchen hood are tightened
Suction is not strong	- There are too many doors and windows around the slim kitchen hood for ventilation, and the convection is too strong. - The host installation height is not within the required range. - The universal air duct is too long or has too many bends. - The exhaust common flue is too narrow or the air outlet is not sealed tightly. - The check valve blade is stuck and cannot rise or fall normally. - The impeller is not cleaned.	- Close some doors and windows - Adjust the installation height to the required range. - Reduce the length of the universal air duct or the number of bends. - Expand the diameter of the flue opening and seal the air outlet in place. - Clean the blades to ensure normal rise and fall - Clean the impeller as required.
oil leak	- There is too much waste oil in the oil cup. - The oil screen has not been cleaned.	- Clean the waste oil from the oil cup. - Clean the oil screen as required.
The display shows	Communication data is abnormal.	Turning off the power does not eliminate the need to call after-sales